





Grill Plate & Fuel Cell Riser Instructions



Use one or both fuel cell risers to achieve your heat source's ideal height.

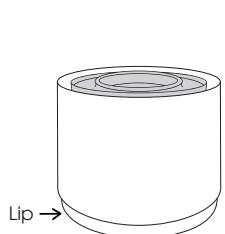


A) 1 riser in low setting
(Lip is on the bottom).

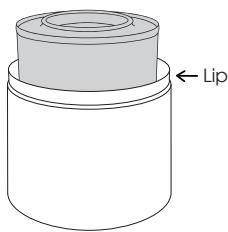



B) 1 riser in high setting
(Lip is on the Top).

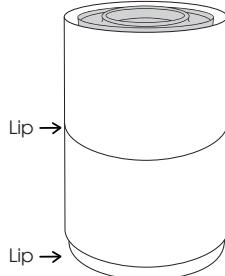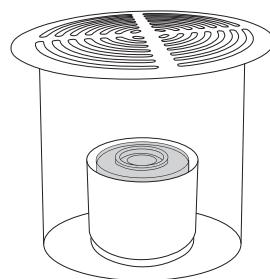

C) 2 stacked risers in
low setting
(Lips are on the bottom).

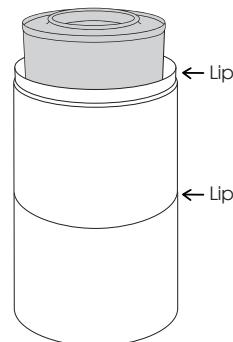

D) 2 stacked risers in
high setting
(Lips are on the top).

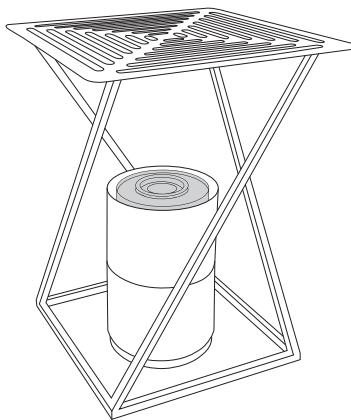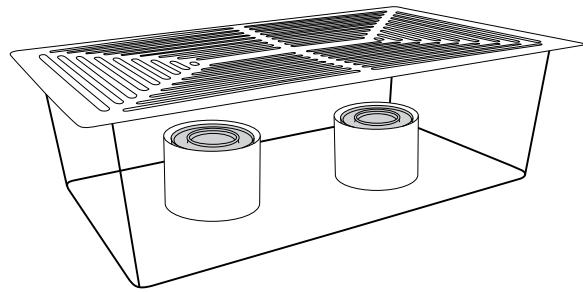

A helpful tip! -----

For best results, the tip of the flame should be at least 2.5" away from the grill plate*.

*Sterno

Grill Plate & Fuel Cell Riser Care & Use:

Do:


- Do use for keeping moist foods warm
- Do wait for the grill plate & fuel cell riser to cool fully before touching
- Wipe down items using a dry, non-abrasive cloth
- Handwash using a mild soap if additional cleaning is needed
- Dry with a soft towel immediately after washing

Don't:

- Don't attempt to move fuel cell riser while fuel is lit
- Don't use for cooking
- Don't use to heat empty or non-liquid vessels, as cracking may occur
- Don't put in dishwasher
- Don't use harsh detergents
- Don't use abrasive or rough scouring pads, brushes or steel wool, which will cause scratches

Instrucciones para uso de la parrilla y la unidad de combustible

Utilice una o dos unidades de combustible para alcanzar la altura ideal de su fuente de calor.

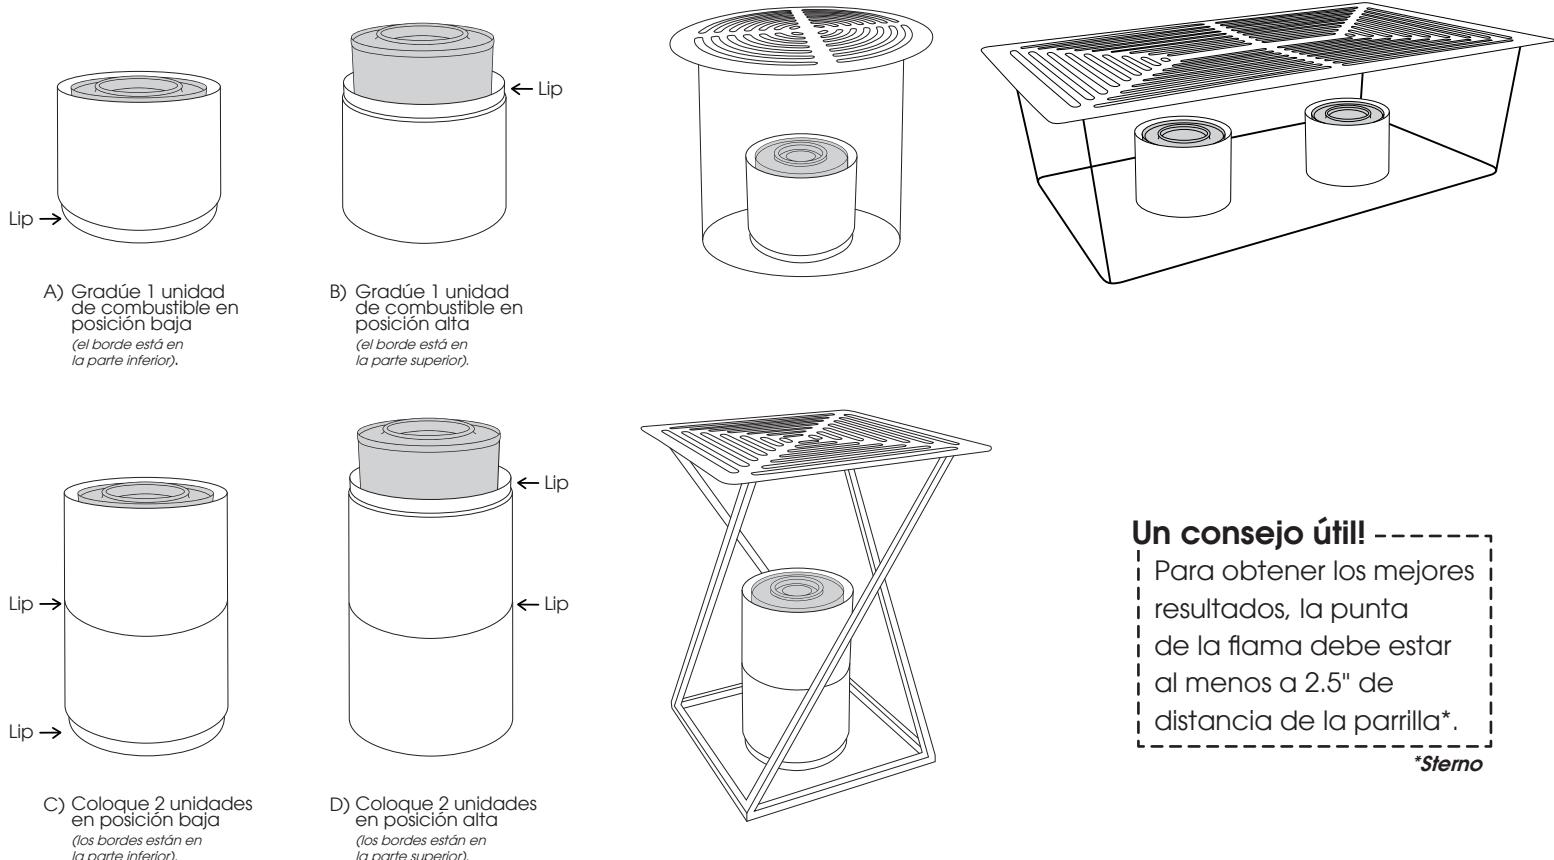

Instrucciones para el cuidado y uso de la parrilla y la unidad de combustible

Debe:

- Usarse para mantener los alimentos calientes
- Esperar a que la parrilla y la unidad de combustible se enfrien completamente antes de tocar
- Limpiar los elementos usando un paño seco y no abrasivo
- Lavarse a mano con jabón suave si necesita una limpieza más profunda
- Secarlos con una toalla suave inmediatamente después del lavado

No debe:

- Intentar mover la unidad de combustible mientras que esté encendida
- Utilizarse para cocinar alimentos crudos
- Utilizarse para calentar recipientes de cocción vacíos o secos porque se puede quebrar
- Lavarlos en el lavavajillas comercial
- Utilizar estropajos abrasivos o ásperos, cepillos o lana de acero que produzcan araños
- Limpiarlos con alcohol, amoníaco ni detergentes fuertes